

Connecting the AD-1688/8527 to the FS-i

1. Requirements

- FS-i
- FS-03i (optional)
- AX-KO7374-200 (optional)
- AX-KO3571-100 (standard accessory for the AD-1688/8527)
- AD-1688 or AD-8527

2. Connection diagram

