

# A&D WeiV

Communication Application for  
Balances / Scales Using *Bluetooth*®

## Instruction Manual



# About This Manual

- (1) No parts of this manual may be reprinted, copied, modified, or translated without the written permission of A&D Company, Limited.
- (2) The contents of this manual are subject to change without notice.
- (3) Please contact A&D if you notice any uncertainty, errors, omissions, etc. in this manual.

© 2023 A&D Company, Limited

# License Agreement

- Copyrights for "A&D WeiV" are owned by A&D Company, Ltd.
- Reproduction of "A&D WeiV" without prior written consent from A&D is prohibited.
- "A&D WeiV" specifications and this manual are subject to change without notice.
- "A&D WeiV" is intended for the transmission of data from an A&D counting scale to a smartphone or tablet. Do not use it for any other purpose.
- A&D Company, Ltd. bears no liability for direct, indirect, special, or consequential damages resulting from any defect in the "A&D WeiV" program or this manual, even if advised of the possibility of such damage. Furthermore, A&D assumes no liability for claims of rights from third parties. Concurrently, A&D assumes no liability whatsoever for software or data losses.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by A&D is under license.
- iOS is an operating system name of Apple Inc., and it is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Apple, the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.
- Android™, Google Play and the Google Play logo are trademarks of Google LLC., registered in the U.S. and other countries.

# Software Download

A&D WeiV can be downloaded from the App Store or Google Play.

- App Store

<https://apps.apple.com/app/a-d-weiv/id6443930190>



- Google Play

<https://play.google.com/store/apps/details?id=jp.co.aandd.balanceapp&hl=en>



# Contents

1. About the Application.....	4
1.1. Features.....	4
1.2. Supported OS/Supported Models .....	5
2. How to Use .....	6
2.1. When Using the Bluetooth Communication Interface Option.....	6
2.2. When Using on Models with Built-In Bluetooth .....	7
2.2.1. Setting the Weighing Device (for the BA-T Series).....	7
2.2.2. Setting the Weighing Device (for the SH-AWP-BT/SJ-AWP-BT Series).....	7
2.3. Connecting a Terminal to the Weighing Device .....	8
3. Details of the Screen .....	9
3.1. The Main Screen .....	9
3.2. The Scan Screen.....	12
4. How to Operate.....	13
4.1. Basic Operation .....	13
4.2. Advanced Functions .....	15
4.2.1. Adding Time/Date/Number .....	15
4.2.2. Repeat Function.....	15
4.2.3. Changing Commands .....	15
4.2.4. Automatic Recover after Disconnection.....	15
5. Troubleshooting.....	16

# 1. About the Application

This application, A&D WeiV, enables wireless connection (using Bluetooth) between electric balances or scales (hereinafter referred to as “weighing devices”) manufactured by A&D and tablets or smartphones (hereinafter referred to as “terminals”), and it receives and saves data (hereinafter referred to as “weighing data”) received from weighing devices.

## 1.1. Features

- Enables terminals to receive weighing data or Good Laboratory Practice (GLP) / Good Manufacturing Practice (GMP) compliant reports.
- Sends commands to weighing devices and controls them.
- Has a repeat function that sends commands per specified time.
- Outputs weighing data after adding date, time, or number.
- Shares weighing data with other applications and saves in an appropriate format.

## 1.2. Supported OS / Supported Models

□ Supported OS

- Android 9.0 or later
- iOS 14.0 or later

□ Supported models (as of January 2023)

Models with which the Bluetooth communication interface option OP-27 (hereinafter referred to as “the option”) is usable.

Models	Necessary options
FZ-i / FX-i series	GXA-27
FZ-iWP / FX-iWP series	
GX-A / GF-A series	
GX-AWP / GF-AWP series	
HR-AZ / HR-A series	
GX-M / GF-M series	
FG-CWP series	FG-27CWP
HV-C / CP, HW-C / CP series	HVW-27C
HV-CWP / HW-CWP series	HVW-27CWP
SC / SE series	SCE-27

\* The option is not usable with EC-type approval models.

Models with built-in Bluetooth

Models	Necessary options
BA-T series	None (Usable without options)
SH-AWP-BT / SJ-AWP-BT series	

\* Bluetooth converter AD-8529PC-W is not usable with A&D WeiV.

## 2. How to Use

 
### 2.1. When Using the Bluetooth Communication Interface Option

□ Setting up the DIP switches

Set up the DIP switches on the option board to enable bidirectional communication.

For the details, refer to the instruction manual of each option board.

1. Disconnect the AC adapter or remove batteries from the weighing device.
2. Following the steps indicated in the instruction manual of the option board, remove the board from the weighing device.
3. Turn off the DIP switches (to enable bidirectional communication).

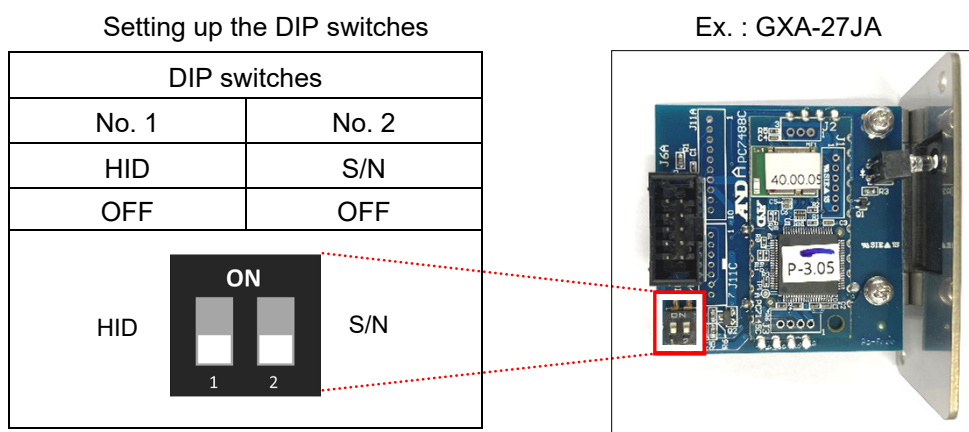

4. Attach the option board to the weighing device again, as indicated in the instruction manual of the option board.
5. Connect the AC adapter to or put in the batteries in the weighing device.


## 2.2. When Using on Models with Built-In Bluetooth
 
### 2.2.1. Setting the Weighing Device (for the BA-T Series)

1. Activate the weighing device and select the menu for setting Bluetooth by pressing the MENU key.

MENU key  → System settings button  → Communication button  → Bluetooth button  → "Bluetooth" screen

Initial status of the Bluetooth menu screen

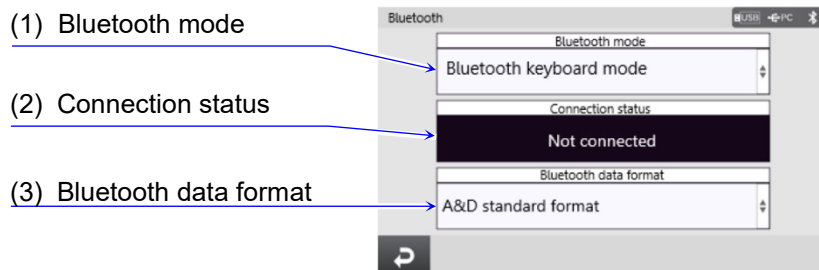

2. Set the **Bluetooth mode** to **Bluetooth serial**, and the **Data format** to **A&D standard format**.

Bluetooth settings (Choose the values surrounded with  below)

	Name	Preset value (setting range)
(1)	Bluetooth mode	Bluetooth keyboard, <input type="checkbox"/> Bluetooth serial
(2)	Connection status	—
(3)	Bluetooth data format	<input type="checkbox"/> A&D standard format, DP format, KF format, MT format, NU format, NU2 format, CSV format,


### 2.2.2. Setting the Weighing Device (for the SH-AWP-BT / SJ-AWP-BT Series)

 Bluetooth is automatically set when the weighing device is activated.

## 2.3. Connecting a Terminal to the Weighing Device

1. Make sure that the Bluetooth function on the terminal is on.
2. Turn on the power of the weighing device. With a weighing value being shown, tap the icon for A&D WeiV installed on the terminal and activate the application. After it is activated, it shows a list of connectable weighing devices on the Scan screen.
3. Select and tap the weighing device to be connected.
  - \* **If the appropriate weighing device is not shown, swipe down the screen to re-scan.**
4. The terminal asks for pairing. Tap **OK**.

The Scan screen

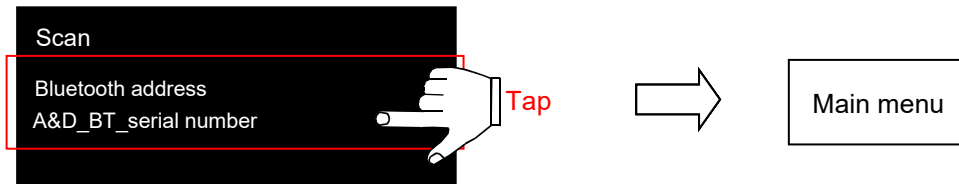


- \* **Depending on the manufacturing date of models and option boards, a number other than the serial number of the weighing device may be shown.**
- If the screen does not change from the Scan screen to the main menu, perform the following steps.
1. If the terminal is already paired with the weighing device, unpair (delete the device) on the setting screen of the terminal.
  2. If the problem persists, turn on the power of the weighing device again. For details of other cases and actions to take, refer to “[5. Troubleshooting](#)”.



### 3. Details of the Screen
 
#### 3.1. The Main Screen

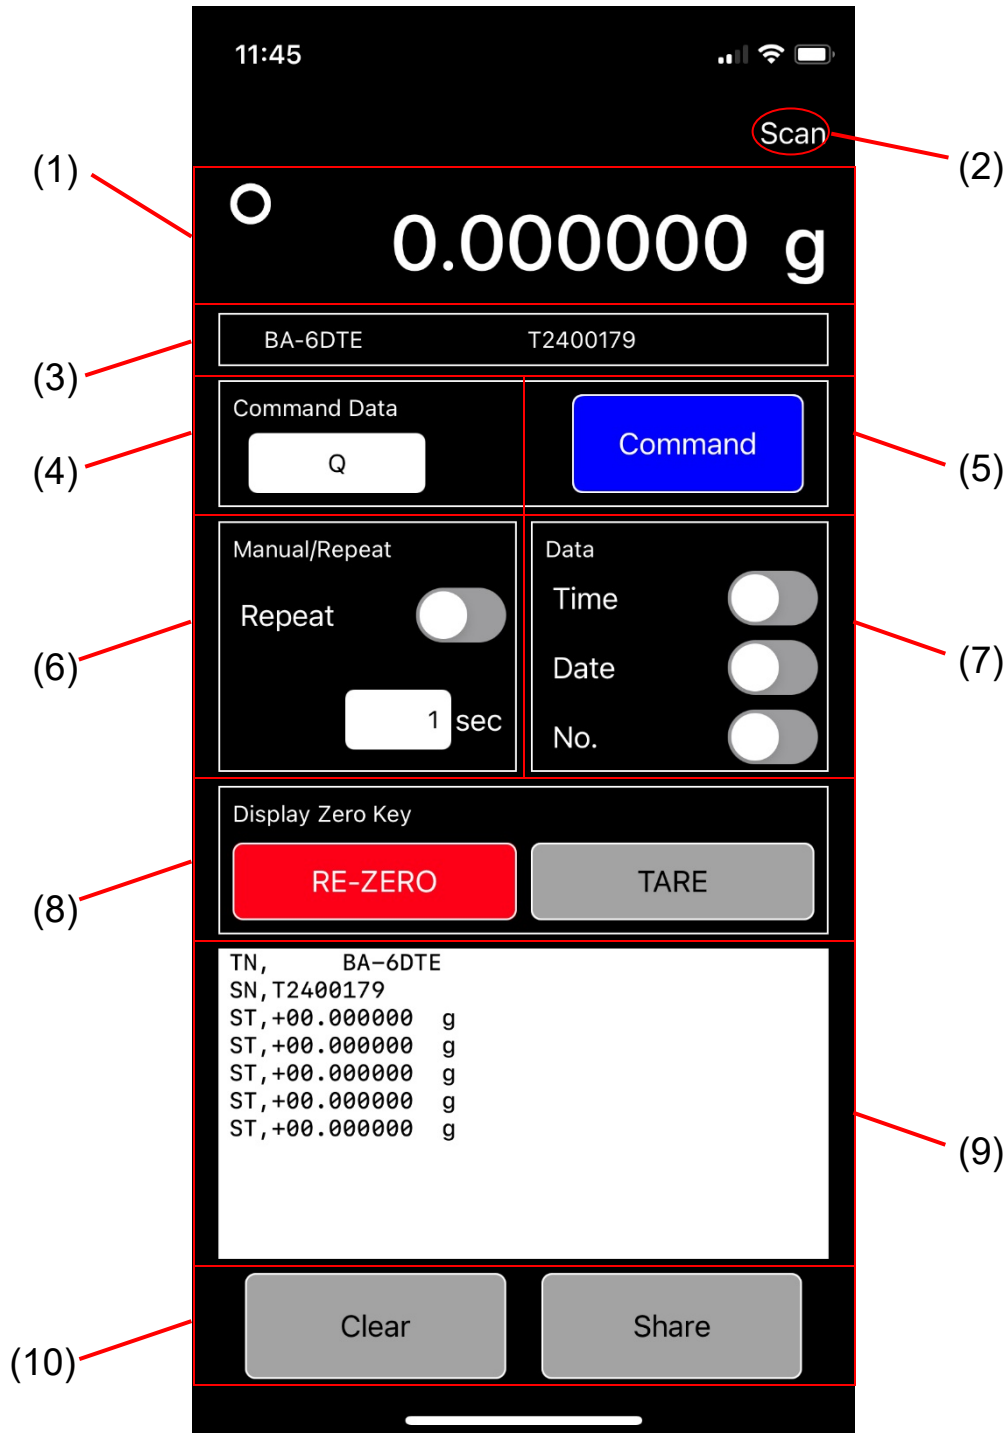

- |                                |                           |                              |
|--------------------------------|---------------------------|------------------------------|
| (1) Weighing result            | (2) Go to the Scan screen | (3) Model name/serial number |
| (4) Entry field for commands   | (5) Send a command        | (6) Repeat function          |
| (7) Add time/date/number       | (8) RE-ZERO, TARE         | (9) Logging data             |
| (10) Clear/share weighing data |                           |                              |

- (1) Weighing result  
Displays the weighing result received in the A&D standard format.  
\* **The weighing result is not displayed if it is in other than the A&D standard format. (Weighing data in (9) is displayed.)**
- (2) Go to the Scan screen  
Tapping this disconnects the connection to the weighing device, and returns to the Scan screen.
- (3) Model name/serial number  
Displays the model name and serial number of the weighing device that is connected.  
\* **Model names or serial numbers are not displayed when the HV-27C, HV-27CWP, or SH-AWP-BT/SJ-AWP-BT series are connected.**
- (4) Entry field for commands  
Shows the Q command by default. As soon as a command is sent, weighing data is output.  
When the entry field is tapped, the keyboard appears and you can change the command.  
\* **For available commands, refer to the instruction manual of the weighing device to be used.**
- (5) Send a command  
When **Command** is tapped, the command entered is sent.
- (6) Repeat function  
When this function is enabled, the command entered in (4) is repeated at a designated interval (seconds).  
1 sec is displayed as a default. Tap the number to change it.  
(999 sec at a maximum, every 1 second)  
\* **As a guide, keep the total number of data to 3000 at a maximum. Otherwise, the Share may not function.**
- (7) Add time/date/number  
Adds time, date, or number to weighing data.  
When data to be added is tapped, it is added.  
Time, date, and number are also added to weighing data that is retrieved before it is tapped.
- (8) RE-ZERO, TARE  
The display of the weighing device shows 0 when these are tapped, and (1) in the main screen is cleared.  
The Z command is sent when **RE-ZERO** is tapped.  
The T command is sent to the weighing device when **TARE** is tapped.  
\* **TARE** does not operate with models that have no tare key.  
The weighing result is displayed again when the Q command is tapped with the **Command**.

(9) Logging data

Logs and displays weighing data.

When time, date, or number is added, the items selected in (6) are displayed separated with commas after weighing data. You can see weighing data that is not shown in the screen by scrolling down. Model name is displayed in the first line and serial number in the second when the screen is shifted from the Scan screen to the main screen (they are not displayed on some models).

(10) Clear or share the weighing data


The following message appears when **Clear** is tapped.




- Weighing data in (9) is cleared if **OK** is tapped.
- Weighing data in (9) is not cleared if **Cancel** is tapped, and the main screen is shown again.

By tapping **Share**, you can share weighing data in (9) with another application and save it.

## 3.2. The Scan Screen

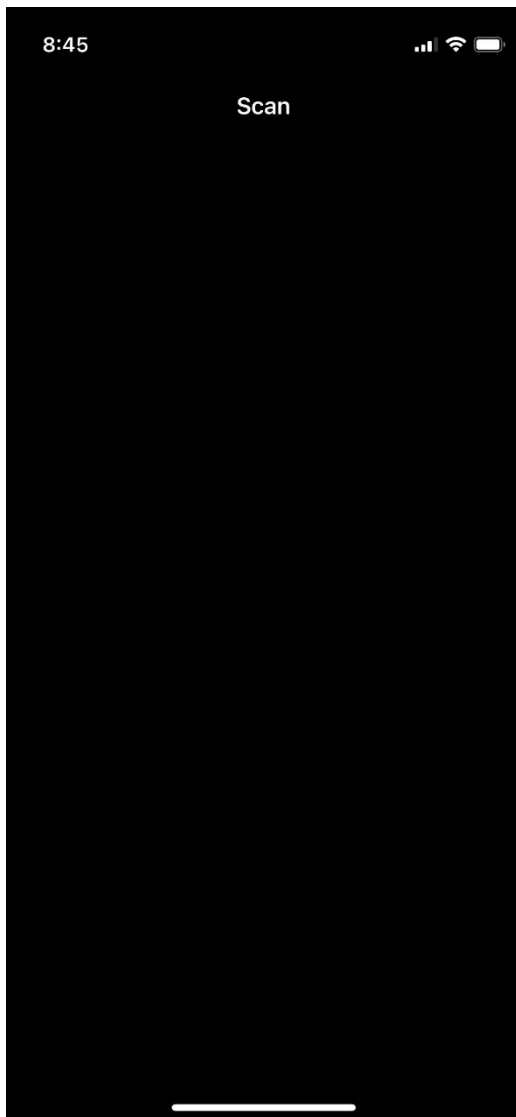 

 There is no device available for pairing

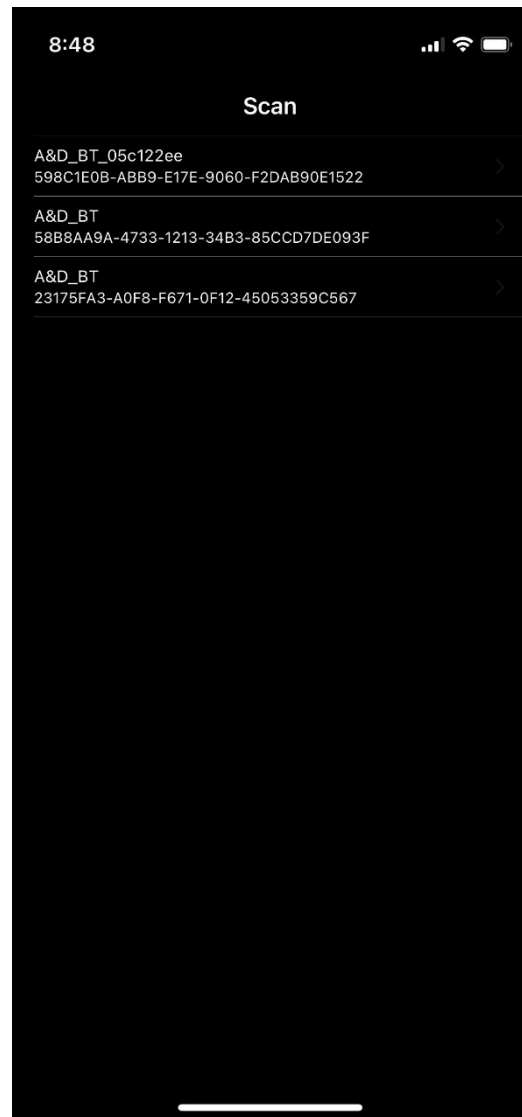

There are devices available for pairing


- \* If Bluetooth communication cannot be detected after the Scan screen is displayed, the screen does not change to the main screen even if the weighing device is tapped.

## 4. How to Operate
 
### 4.1. Basic Operation

This section describes how to log the weighing data on the main screen after the weighing device is connected.

- \* **The weighing device should show the weighing result (weight should be displayed).**
1. With nothing placed on the weighing device, tap **RE-ZERO**.  
The weighing device shows 0.00 g (the number of digits shown varies depending on the model).
  2. When using tare, place a tare weight and tap **TARE**.  
The weighing device shows 0.00 g (the number of digits shown varies depending on the model).
  3. Place objects on the weighing device, and then tap **Command** with Q shown in the **Command Data**. A value is displayed and recorded in the weighing result in (1) and logging data in (9).
  4. Repeat step 3 above.
  5. Once weighing is complete, tap **Share**.

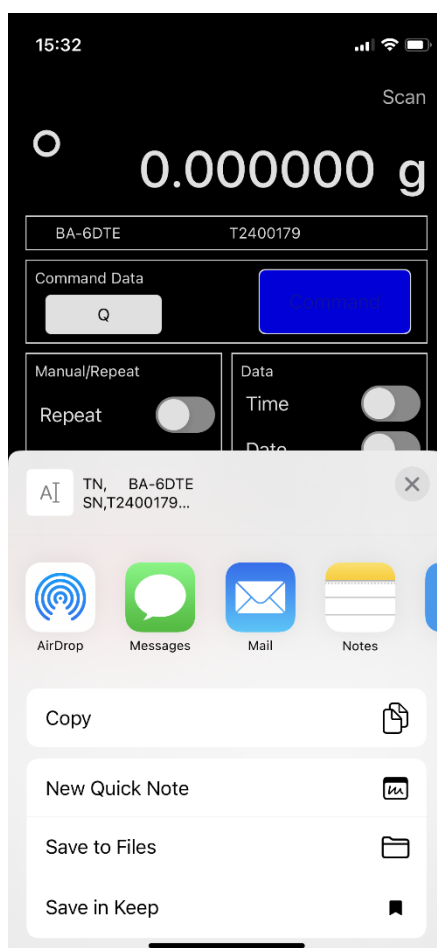

6. From the list of application that appears, tap and open an application such as Mail or Notes.  
The contents of the weighing data are shown in the application.
7. You can mail or save the data with the application.

8. Exit the application, and return to the main screen of A&D WeiV.
9. To delete the weighing data, tap **Clear** and then tap **OK** in the message screen that appears.
10. To exit the screen, disconnect the communication with the weighing device by tapping **Scan** to return to the Scan screen. Then, exit A&D WeiV.



## 4.2. Advanced Functions

### 4.2.1. Adding Time/Date/Number

To add time, date, or number to weighing data, tap among **Time**, **Date**, or **No.** shown in **Data**. The item for the button tapped is added to weighing data. It can be used in step 3 to step 4 in “4.1. Basic Operation”.

- \* The item selected above is added to past data as well. To disable it, tap the item again.

### 4.2.2. Repeat Function

This function is helpful for weighing at a regular interval and for using the application as an external indicator while logging. It can be used in step 3 to step 4 in “4.1. Basic Operation”.

1. Tap the number (default: 1) shown in **Manual/Repeat**.
2. Select the number of seconds from the list, and then tap **OK**. The number can be selected in increments of 1 second.
3. When **Repeat** is turned on, the repeat function automatically runs with the command (Ex.: Q) set in **Command Data** at a designated interval.
4. To turn off the repeat function, tap the button next to **Repeat**.

### 4.2.3. Changing Commands

1. Tapping a command (Ex: Q) in **Command Data** enters the edit mode.
2. Enter a command that can be used with a weighing device.
  - \* For available commands, refer to the instruction manual of each weighing device.  
Commands including controlling codes such as <ESC> (ASCII: 1Bh code) are not usable.
3. Either tap **Command** or enable **Repeat** to run the command.

### 4.2.4. Automatic Recover after Disconnection

When connection to a weighing device is disconnected, part of the screen temporarily darkens, and the following operations are disabled. Once it is connected again, the darkened area is brightened, and the operations are automatically recovered.

Operations that are disabled

(4)(5) Commands operation      (6) Repeat function      (8) RE-ZERO, TARE

- \* (6) is disabled after automatic recovery

## 5. Troubleshooting

When there is any communication problem with a weighing device, refer to the following list.

Issue	Where to check	Cause	Action to take
Connection to a weighing device fails (A device is not selectable in the Scan screen)	The screen for setting terminals	Bluetooth is turned off.	Turn on Bluetooth in the terminal.
		Pairing is not turned off after previously connecting a weighing device to A&D WeiV. Pairing is registered in the terminal settings without using A&D WeiV.	Restart A&D WeiV after cancelling pairing with the terminal.
		The weighing device to be connected is paired with an another terminal.	Unpair the terminal that has been connected. Then, connect to A&D WeiV in the terminal to be connected.
		A weighing device other than the one to be connected is paired.	Go to the Scan screen and tap an appropriate weighing device.
	Option board	The DIP switches are not set to enable bidirectional communication (the switches are not turned off).	As described in "2.1. When Using the Bluetooth Communication Interface Option", set the DIP switches to enable bidirectional communication (turn off both switches).
Settings screen on weighing devices	(With the BA-T series) Bluetooth is not set up correctly.	As described in "2.2.1. Setting Up a Weighing Device (for the BA-T Series)", reset the Bluetooth settings.	
The Scan screen on A&D WeiV	Bluetooth connection with the weighing device was not ready when A&D WeiV was scanning pairable devices.	Swipe down the Scan screen to refresh the screen.	
"A&D_BT" is not shown in the list of weighing devices.	The Scan screen on A&D WeiV	Depending on terminals' OS versions or manufacturing date of option boards, only alphanumeric characters may be shown.	Tap what is displayed to show the main screen. Check if the model name and the serial number shown in the main screen are same as that of the weighing device to be connected.
The main screen partly darkens	The main screen on A&D WeiV, weighing devices	Bluetooth communication with the weighing device is disconnected.	If not automatically recovered, check if the power of the weighing device is turned on.
The operation does not proceed according to the designated commands	The main screen on A&D WeiV, weighing devices	Bluetooth communication with the weighing device is disconnected.	Tap <b>Command</b> again to send commands. If the problem persists, check if the power of the weighing device is turned on.
	Weighing devices	The weighing device is not showing a weighing result.	Set to show weighing result on the weighing device.
The settings of the weighing device are not correct.		Check the function settings of the weighing device.	