

AD-5709TL-E

IPX7 Waterproof 100 Minute Step Interval Timer

AND
Discover Precision

IPX7 IPX7 means that even if the timer is gently submerged in a water tank containing still tap of water at room temperature to a depth of 1 meter, and left at the bottom of the tank for about 30 minutes, there will be no intrusion of water inside the timer and the timer will retain its performance.

(Almost full scale image)



Attachment Methods

Magnet, hooking hole (on wall), strap hole (strap not included)

Powerful neodymium magnet mounted on the back

Pause function

Allows the timer to be paused and resumed.

Reload function

Shows the set alarm time again.

Count Up function

Counts up from 0 to 99 min and 59 sec like a stopwatch.

Alarm with buzzer and red LED



Kitchen: Cooking



Lab: Science Tests


Step Timer function

Can be set up with up to 8 timers, executed in sequential steps.
NOTE: Repeating will repeat all step timers in the sequence as a group with each step timer running only once.


Interval Timer function

Once a timer is set, it can be repeated from 1 to 999 times, or infinitely. Remaining number of repeats is displayed while the timer is running.


Example of 5 step timers in sequence

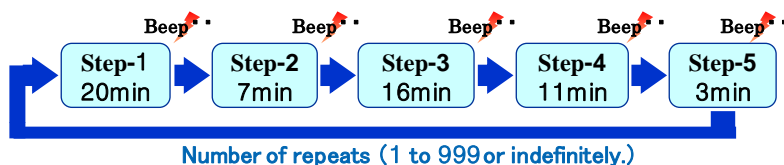

Number of repeats (1 to 999 or indefinitely.)

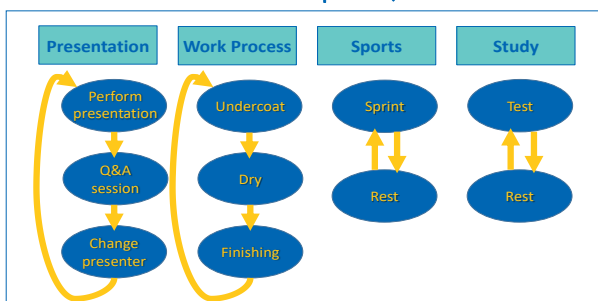

Hygiene Control

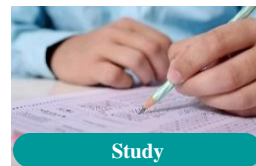

Study



Work Processes

	AD-5709TL-E
Timer range	From 10 sec to 99 min 50 sec (1 sec countdown interval)
Count up timer	Up to 99 min 59 sec (1 sec count-up interval)
Alarm	About 30sec / 5sec
The number of step timer	Up to 8 timers can be set in succession
The number of repeating timer	Repeat can be set up to 999 times or indefinitely.
Buzzer	About 65dB(15cm distance)
Waterproof	IPX7
Battery	CR2032 lithium battery, lifetime of about one year (with a condition of using 1 alarm per a day)
Operating temp.	0 to 40°C, less than 85% RH
Dimensions and weight	68(W)x68(H)x16(D) mm / about 60 g including battery

AND
A&D Company, Ltd.

Discover Precision

A&D Company, Ltd. (JAPAN)
URL: aandd.jp
A&D Engineering, Inc. (USA)
URL: andonline.com
A&D Australasia Pty Ltd. (Australia)
URL: andaustrolasia.com.au
A&D Korea Ltd. (South Korea)
URL: andk.co.kr

A&D Instruments Ltd. (United Kingdom)
URL: andprecision.com
<German Sales Office>
URL: andprecision.com
A&D Rus Co., Ltd. (Russia)
URL: and-rus.ru

A&D Instruments India (P) Ltd. (India)
URL: aanddindia.in
A&D Scientech Taiwan Ltd. (Taiwan)
URL: aandd.com.tw
A&D Instruments Thailand Ltd. (Thailand)
URL: thai.andprecision.com