

Water-resistant

Household Salt Meter AD-4724

AND
A&D Weighing

Ensure a healthy and tasty diet by checking **salt concentration** and **temperature** values



Salt concentration

0.1%
Increment
up to **1.9%**

Temperature

0.1°C
Increment
up to **70°C**



Calculating the salt content from the salt concentration

In the case of 1 cup of miso soup (150 g) with salt concentration of 1.2 % :


$$150 \text{ (g)} \times 1.2 \text{ (%) } \div 100 = \mathbf{1.8 \text{ (g)}}$$

Serving amount

Salt concentration

Salt content

Simultaneous measurement of salt concentration and temperature

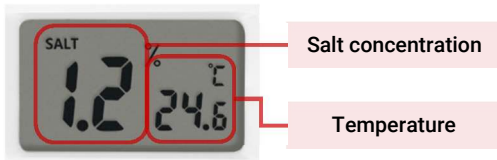

Water resistance IP65

Hygienic - can be washed under running water

* Cannot be immersed in water.

Hold function

Holds the measured values so it can be easily checked later.

Specifications

| | | AD-4724 |
|-----------------------------|--------------------|----------------------------------------------------------------------------------|
| Measurement method | | Electrical conductivity method |
| Display method | | 2-digit LCD display |
| Measurement range | Salt concentration | 0.0% to 1.9% (Minimum display 0.1%) |
| | Temperature | 0.0°C to 70.0°C (Minimum display 0.1°C) |
| Measurement accuracy | Salt concentration | ±0.2% (0.3% to 1.3%), ±0.4% (0.0% to 0.2%, 1.4% to 1.9%) |
| | Temperature | ±2.0°C |
| Auto power off | | Approx. 10 minutes |
| Water resistance | | IP65 |
| Operating environment | | Temperature 0°C to 40°C, Humidity less than 85%RH (with no condensation) |
| Power source / Battery life | | CR2032 lithium battery x 1 / Approx. 1 year (when used for 5 minutes per day) |
| Dimensions / Weight | | 32.2 (W) × 15.4 (D) × 185 (H) mm / Approx. 35 g (incl. batteries) |
| Accessories | | Battery (for monitor), silicon cap, instruction manual |

The salt meter can measure the salt concentration of smooth liquids such as miso soup, soups, and broths.

Solids, powders, and highly viscous liquids such as curry cannot be measured. Furthermore, it may not be possible to correctly measure soups and other liquids with a high oil content.

AND
A&D Company, Ltd.

Discover Precision

A&D Company, Ltd. (JAPAN)
URL: aandd.jp

A&D Engineering, Inc. (USA)
URL: andonline.com

A&D Australasia Pty Ltd. (Australia)
URL: andaustrolasia.com.au

A&D Instruments Ltd. (United Kingdom)
URL: andprecision.com

<German Sales Office>
URL: andprecision.com

A&D Korea Ltd. (South Korea)
URL: andk.co.kr

A&D Rus Co., Ltd. (Russia)
URL: and-rus.ru

A&D Instruments India (P) Ltd. (India)
URL: aanddindia.in

A&D Sciencetech Taiwan Ltd. (Taiwan)
URL: aandd.com.tw

A&D Instruments Thailand Ltd. (Thailand)
URL: thai.andprecision.com